


For Windows 7 Click on

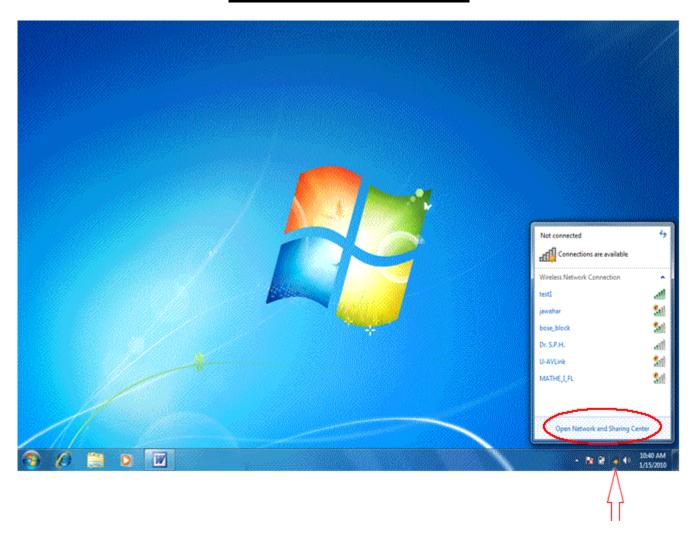


Click on" Open Network and Sharing Center"

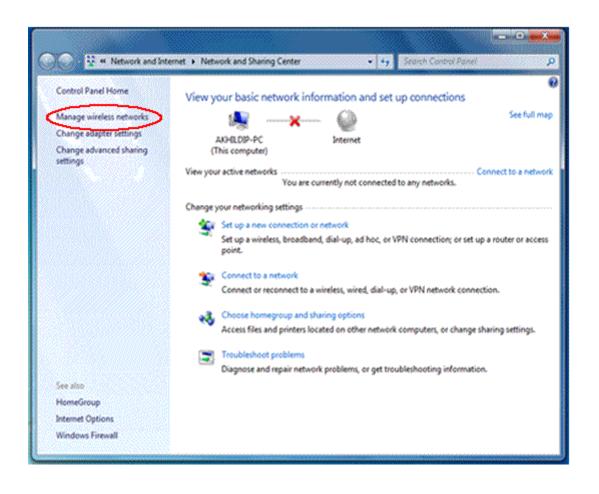


Click To "Manage Wireless Network"

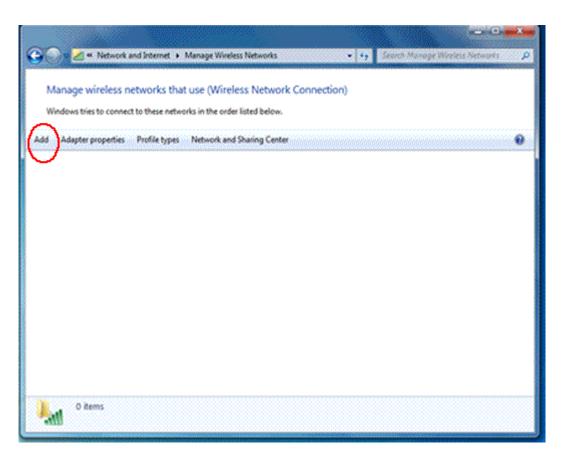


Click to "Add" Tab

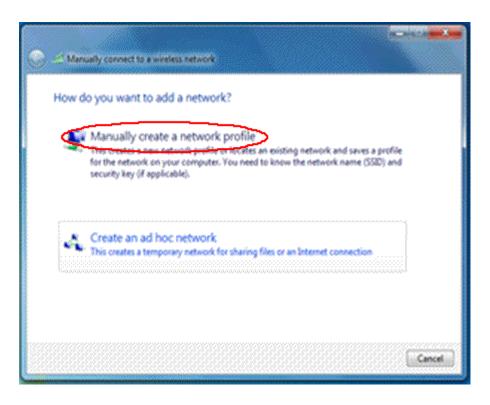


Click to "Manually create a network profile"

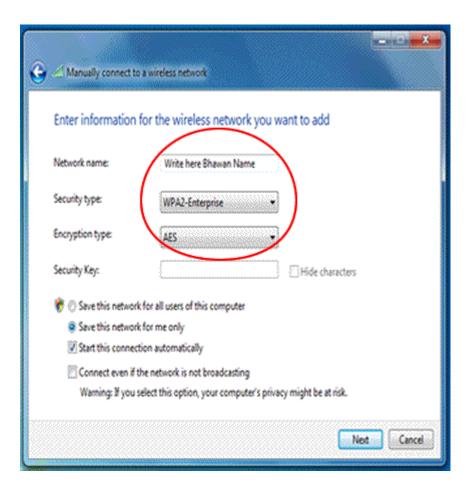


- 1. Write your "Network Name" i.e. Kasturba, Sarojini, Govind, etc...
 - 2. Select "Security Type" WPA2-Enterprise"
 - 3. Check Encryption Type is "AES"
 - 4. Click to "Next"

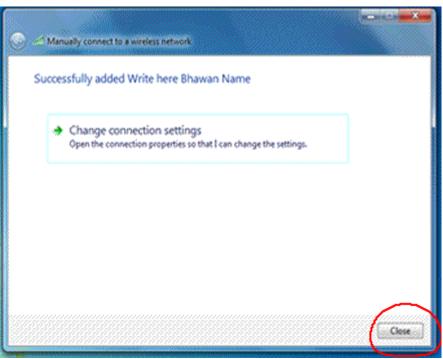


Click to "Close"

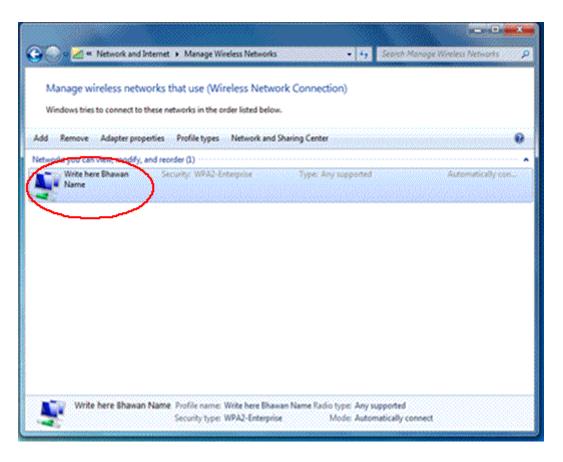


Select and right click on your configured network name

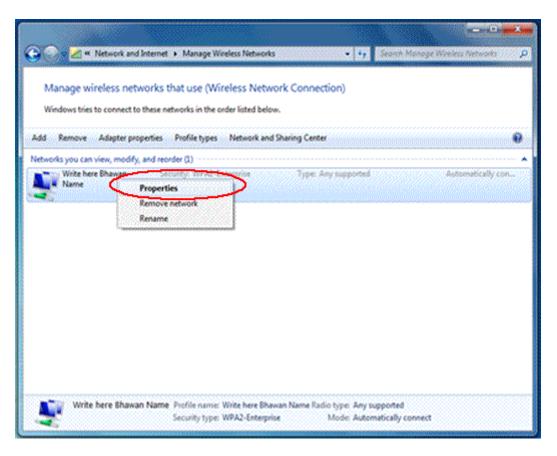


Click on "Properties"

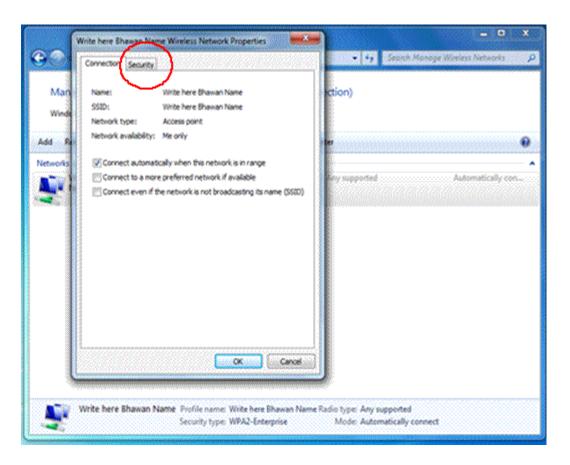

Select the "Security" Tab

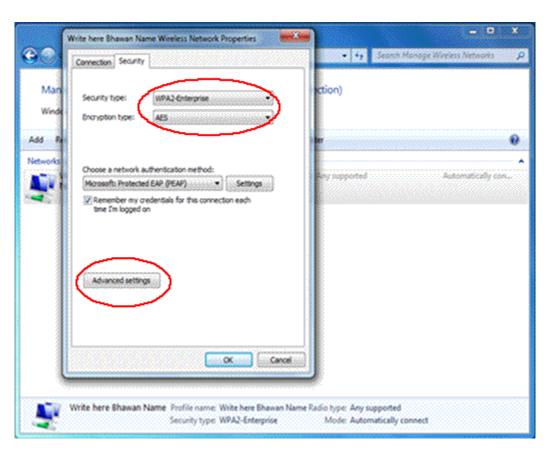


- 1. Check the Security type is "WPA2-Enterprise"
 - 2. Check the Encryptions type "AES"
 - 3. Click "Advanced setting" Tab

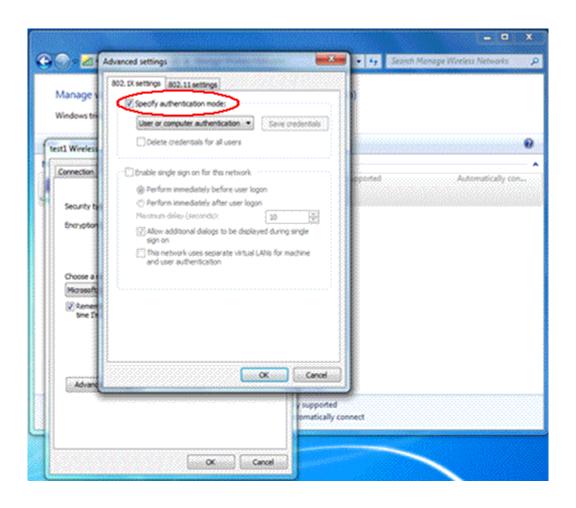


- 1. "Check Mark" to "Specify authentication mode" & select "user or computer authentication"

 And click OK
- 2. Choose a network authentication method is "Microsoft: Protected EAP (PEAP)" and click to The" settings"

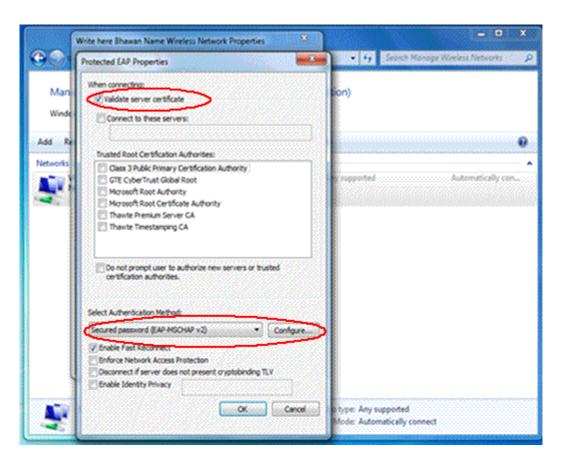

- 1. Uncheck to" validate server certificate"
- 2. select authentication method "secured password (EAP-MSCHAPv2)" and click on "configure"

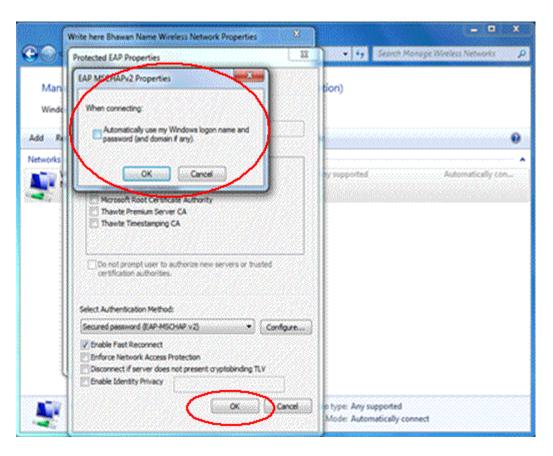

- 1. Uncheck to EAP-MSCHAP v2 Properties.
 - 2. Click to OK
 - 3. Click to OK

This Logging windows will appears

